Home Decorators

Collection

HDC# 08053 MFG# TW-18401IY
SOUTHPORT 4 DOOR SIDEBOARD 30"Hx58"W x14.5"D

ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China

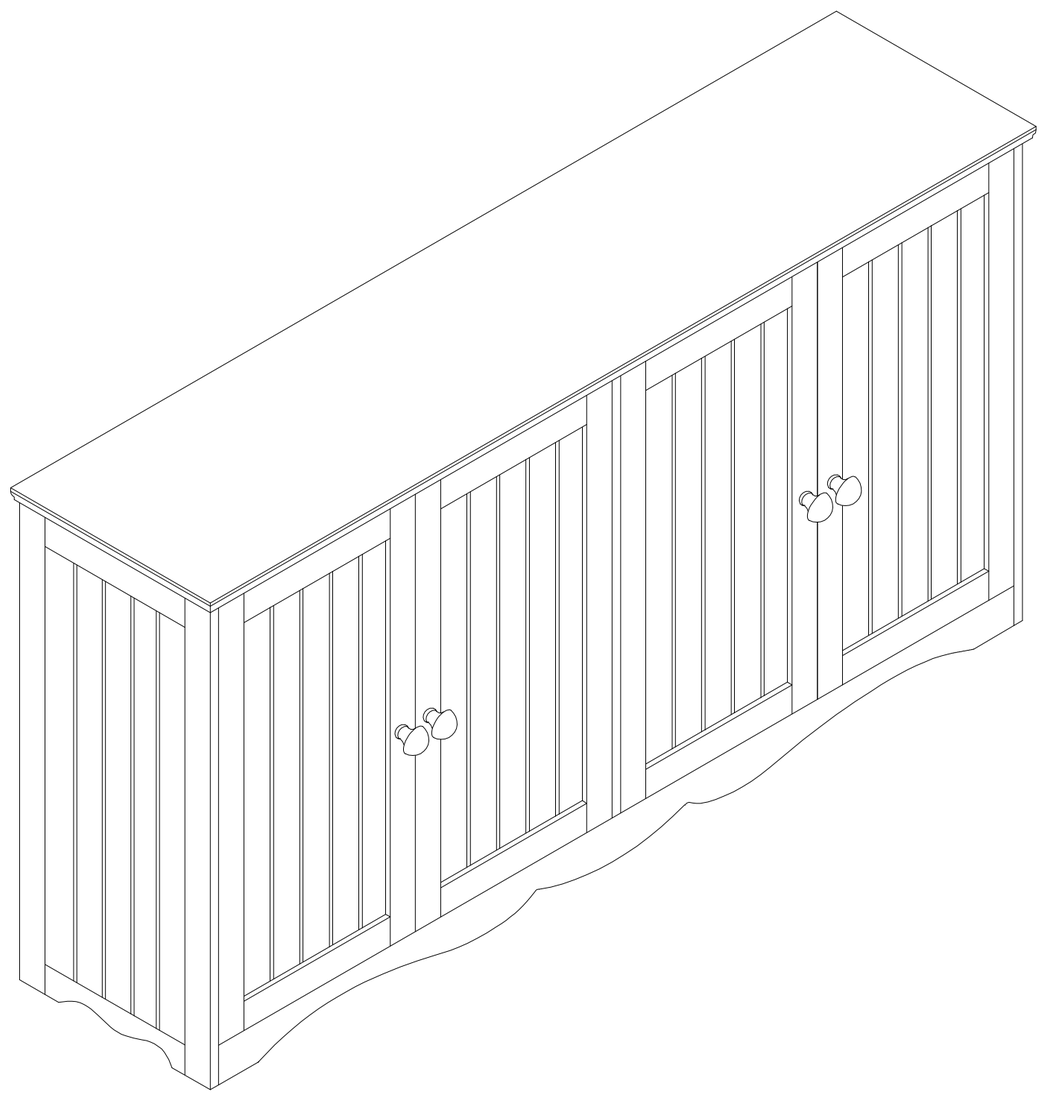

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

ASSEMBLY TOOLS REQUIRED

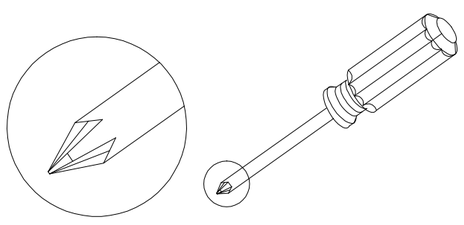

"+"Screw driver

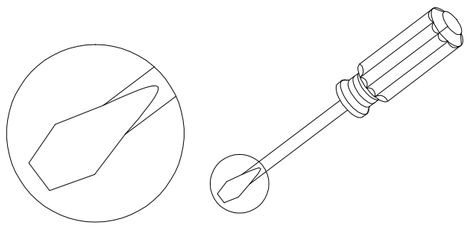

"-"Screw driver

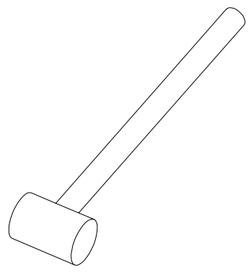

Rubber Mallet

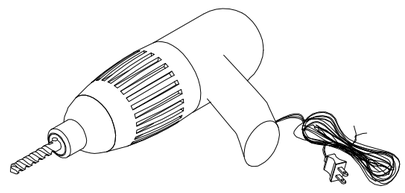

Electric drill

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.
(2) GENTLY TAP DOWEL INTO HOLE WITH RUBBER MALLET OR USE HAND PRESS IN.
DO NOT USE HAMMER
(3) WIPE AWAY EXCESS GLUE.

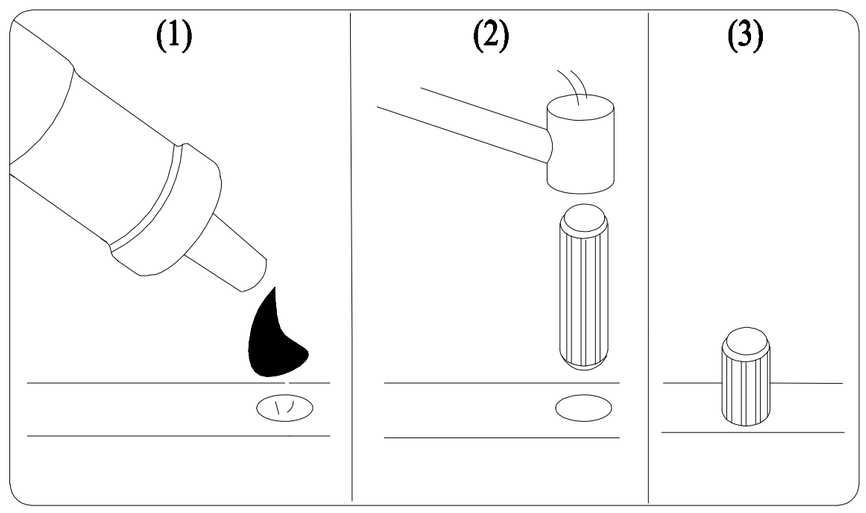

HIDDEN CONNECTOR ASSEMBLY TECHNIQUES FOR LOCK NUT & LOCK PIN

1 SET INCLUDES: (C) CAM-LOCK 1PC. (A) CAM BOLT 1PC.
TOOL NEEDED: ″+″ SCREW DRIVER
STEP 1: SCREW CAM BOLT (A) ONTO PRE-SET PLASTIC NUT ON PANEL. USE A ″+″ SCREW-DRIVER FOR TIGHTENING. ATTENTION: DO NOT OVER TIGHTEN THE CAM BOLT (A).
STEP 2: ATTACH BOTH PANELS, MAKE SURE YOU HAVE INSERTED THE CAM BOLT TO THE VERY DEPTH OF THE HOLE WITH RUBBER MALLET GENTLY, CAUTION: DO NOT USE HAMMER. THEN INSERT CAM-LOCK (C) INTO PRE-DRILLED HOLE ON PANEL, MAKE SURE THE ARROW ON CAM-LOCK (C) SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE CAM BOLT (A) HAS BEEN INSERTED AND INSERTED THE CAM-LOCK (C) TO THE VERY DEPTH OF THE HOLE.
STEP 3: ROTATE THE CAM-LOCK (C) CLOCKWISE TO SECURE CAM BOLT (A) BY TIGHTENING WITH A ″+″ SCREWDRIVER.

DETAIL STEP PLEASE SEE THE BELOW PICTURE.

VERTICAL CONNECTION

(1)

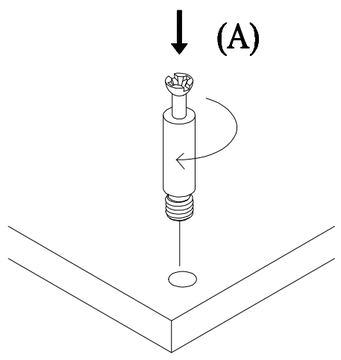

(2)

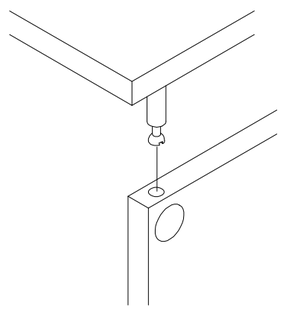

(3)

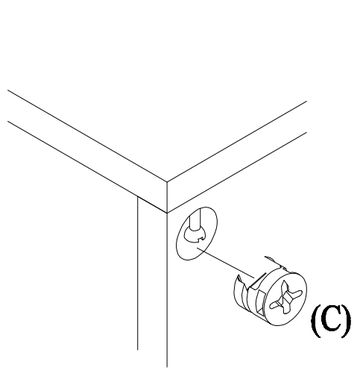

(4)

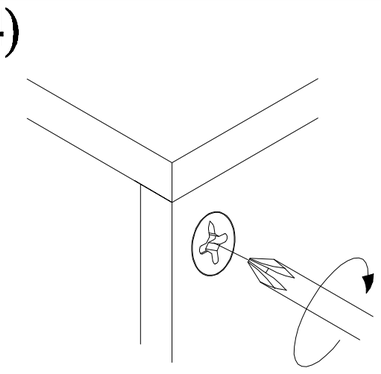

(5)

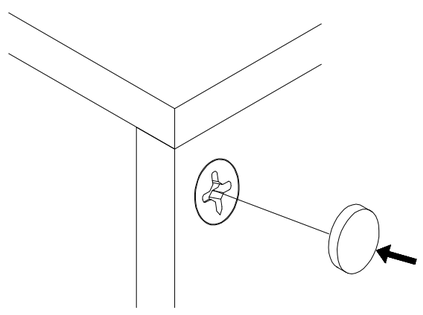

HORIZONTAL CONNECTION

(1)

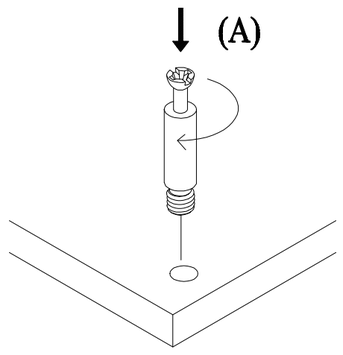

(2)

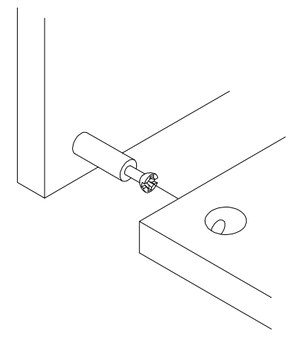

(3)

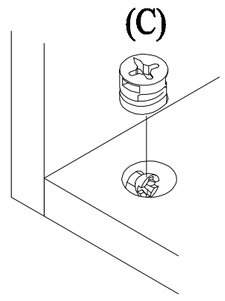

(4)

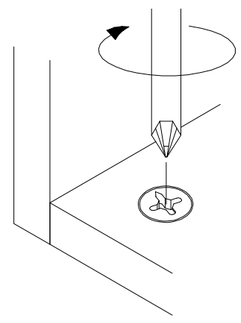

(5)

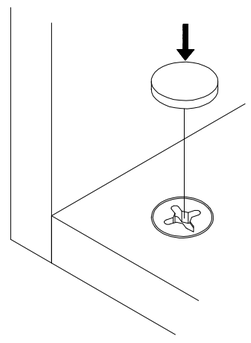

PARTS LIST

DOOR 2 PCS

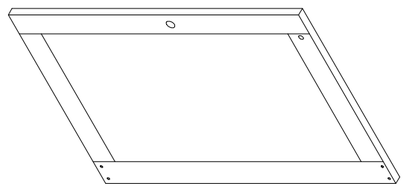

A

DOOR 2 PCS

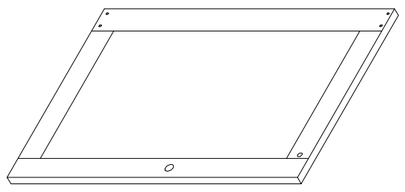

B

TOP PANEL 1 PC

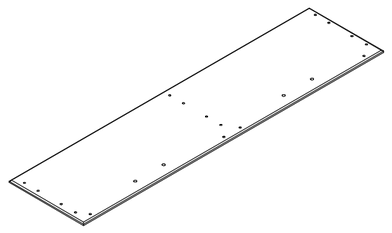

C

BOTTOM PANEL 1 PC

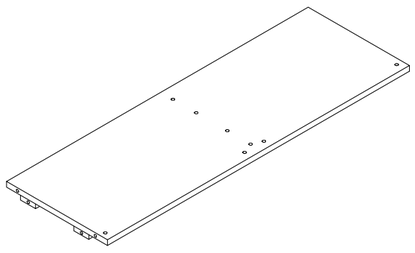

D

ACROSS PANEL 1 PC

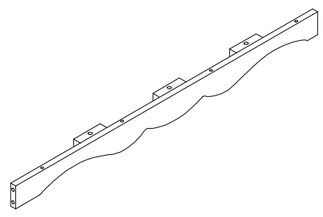

E

LEFT SIDE PANEL 1 PC

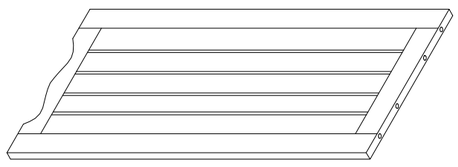

F

RIGHT SIDE PANEL 1 PC

G

MIDDLE VERTICAL PANEL 1 PC

H

SHELF 2 PCS

I

BACK PANEL 1 PC

J

LEG 1 PC

K

L

HARDWARE LIST

WOOD DOWEL 20 PCS (1)	CAM BOLT CAM-LOCK VELVET HOLE COVER 8 SETS  (2)	ROUND HEAD BOLT FLAT WASHER 7 SETS  (3)	KNOB ROUND HEAD BOLT 4 SETS  (4)
HINGE ROUND HEAD SCREW 4 SETS (5)	HINGE ROUND HEAD SCREW 4 SETS  (6)	MAGNET LOCK ROUND HEAD SCREW 2 SETS 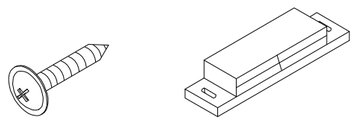 (7)	IRON SLICE FLAT HEAD SCREW 4 SETS (8)
SHELF HOLDER 8 PCS 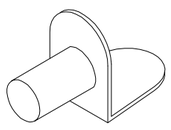 (9)	ROUND HEAD SCREW 30 PCS  (10)	TILTING PREVENT HARDWARE 2 SETS 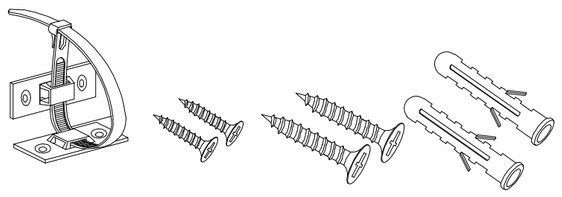 (11)	ALLEN KEY 1 PC  (12)	GLUE 1 PC 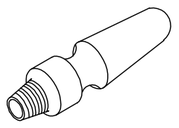 (13)

STEP 1: ASSEMBLE ACROSS PANEL (E) ON BOTTOM PANEL (D)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) TO ATTACH ACROSS PANEL (E) AND BOTTOM PANEL (D) TOGETHER BY ALLEN KEY (12).

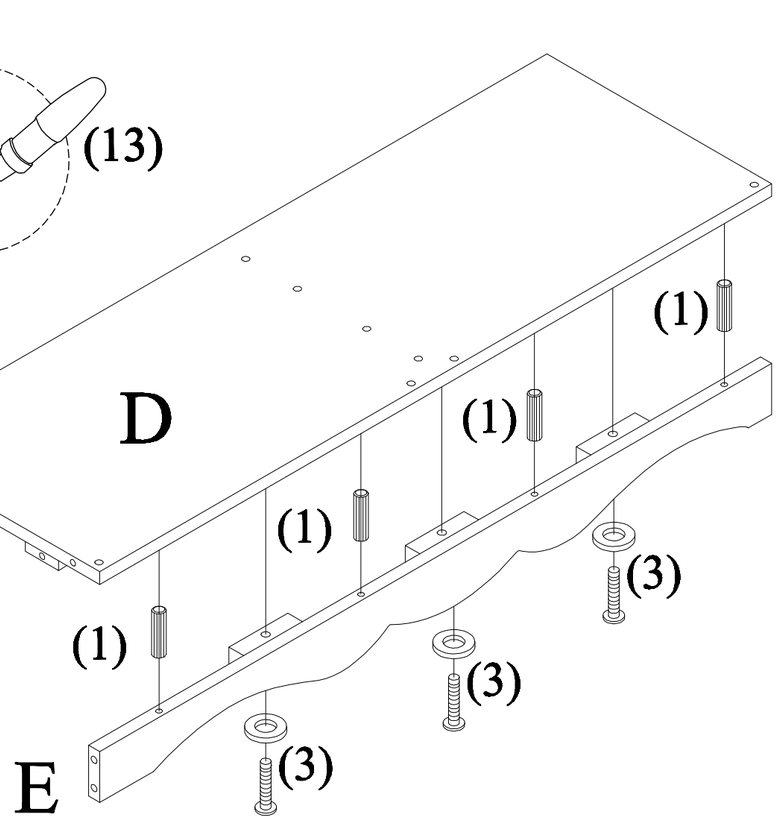

STEP 2: ASSEMBLE LEG (K)

- ASSEMBLE LEG (K) ON BOTTOM PANEL (D).

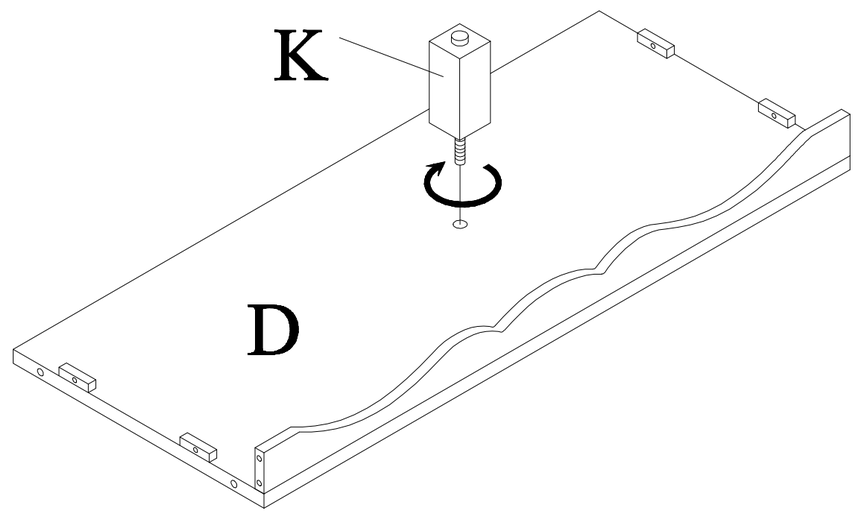

STEP 3: ASSEMBLE MIDDLE PANEL (H)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM BOLT & CAM LOCK (2) TO ASSEMBLE MIDDLE VERTICAL PANEL (H) AND BOTTOM PANEL (D)TOGETHER. (PLEASE PAY ATTENTION TO THE UPWARD LABEL TO MAKE SURE IT IS ASSEMBLED CORRECTLY).
- USE VELVET HOLE COVER (2) TO COVER THE CAM-LOCK HOLES AS SHOWN.

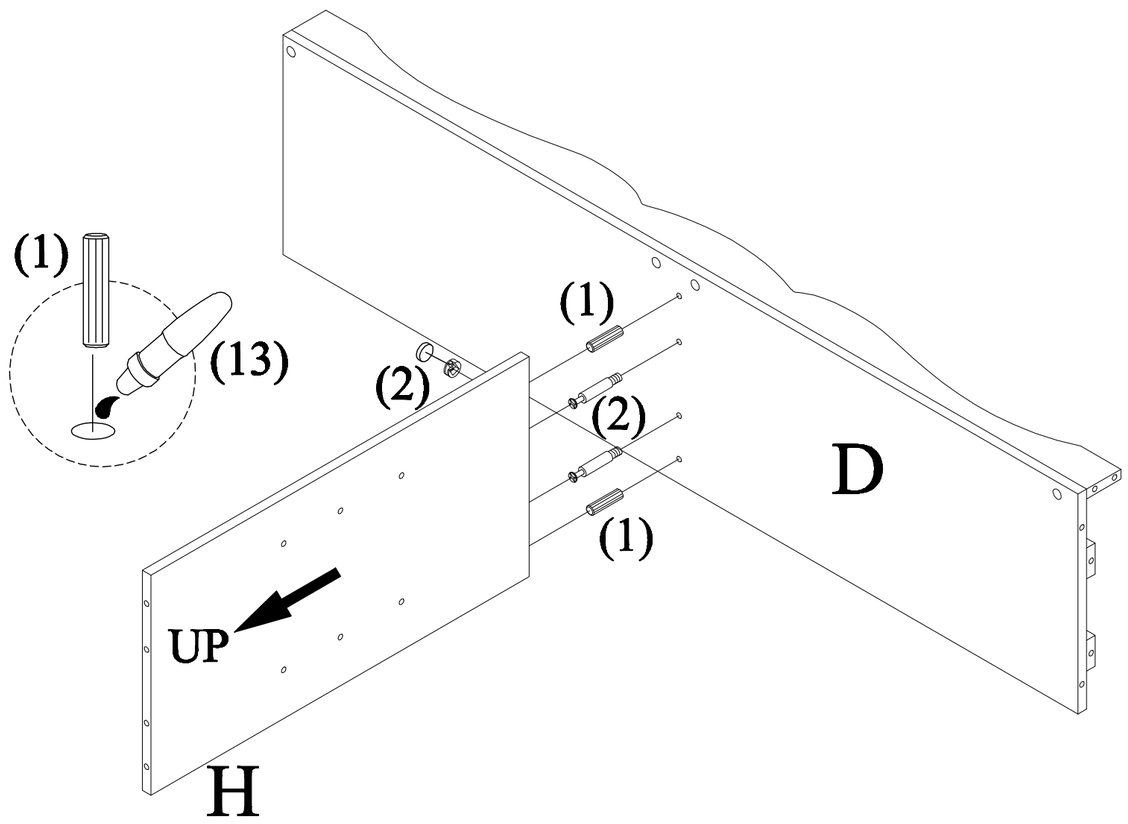

STEP 4: ASSEMBLE SIDE PANEL (F & G)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) TO ATTACH SIDE PANEL (F & G) AND BOTTOM PANEL (D) TOGETHER.

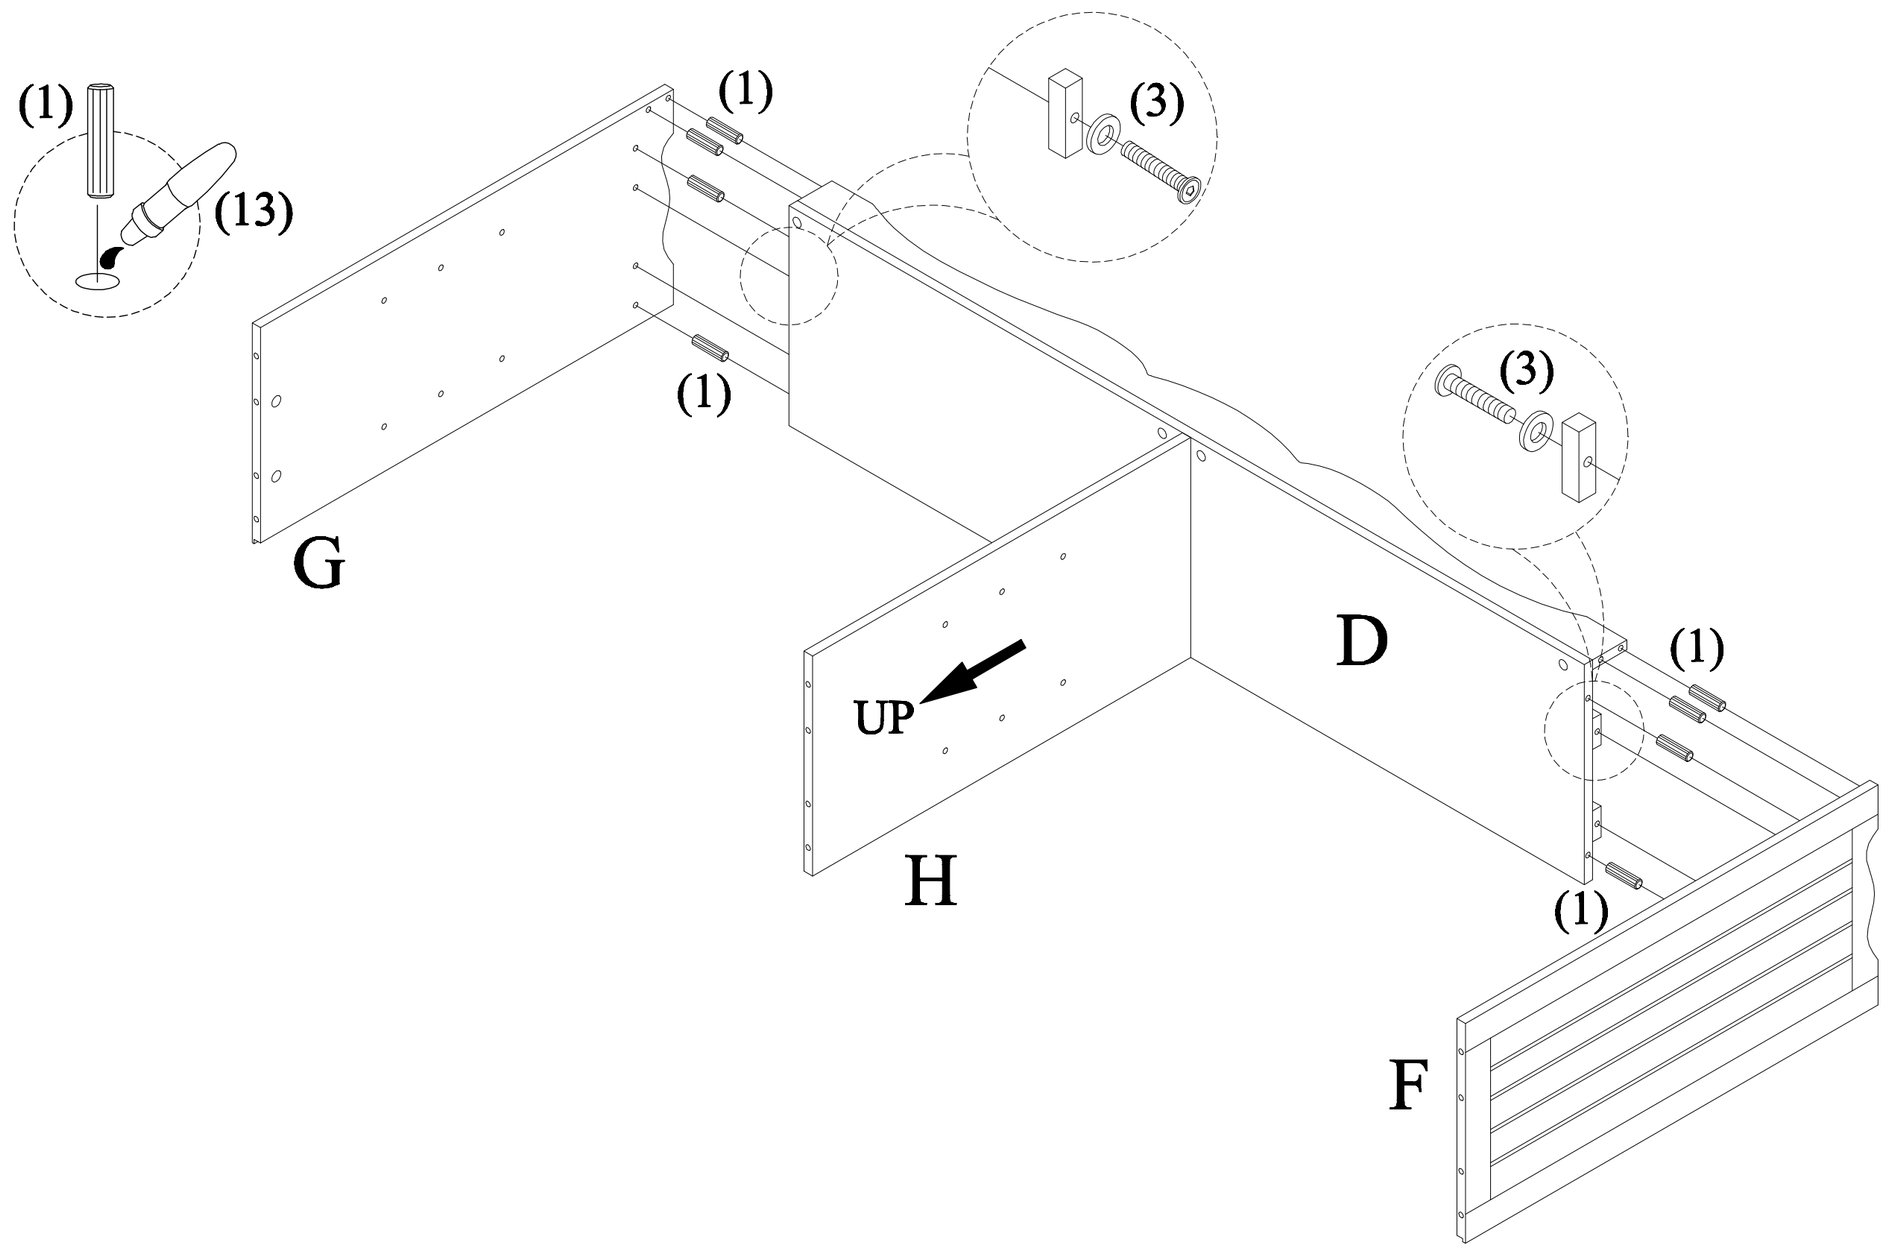

STEP 5: ASSEMBLE KNOB, HINGE, IRON SLICE

- USE ROUND HEAD BOLT (4) TO ATTACH KNOB (4) ONTO DOOR (A & B).
- USE ROUND HEAD SCREW (5) & (6) TO FIX HINGE (5) & (6) ONTO DOOR (A & B) AS SHOWN.
- USE FLAT HEAD SCREW (8) TO ATTACH IRON SLICE (8) ONTO DOOR (A & B).

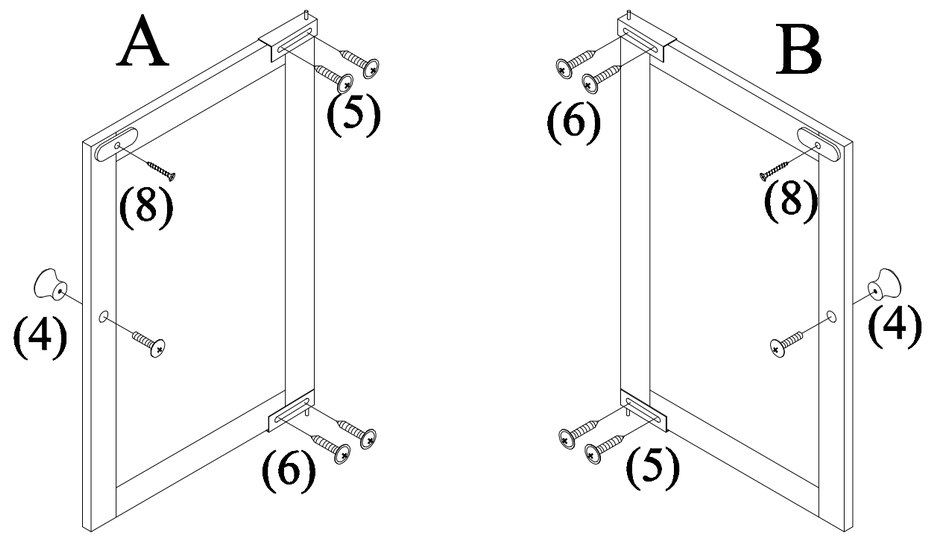

STEP 6: ASSEMBLE MAGNET LOCK (7)

- USE ROUND HEAD BOLT (7) TO ATTACH MAGNET LOCK (7) ONTO TOP PANEL (C).

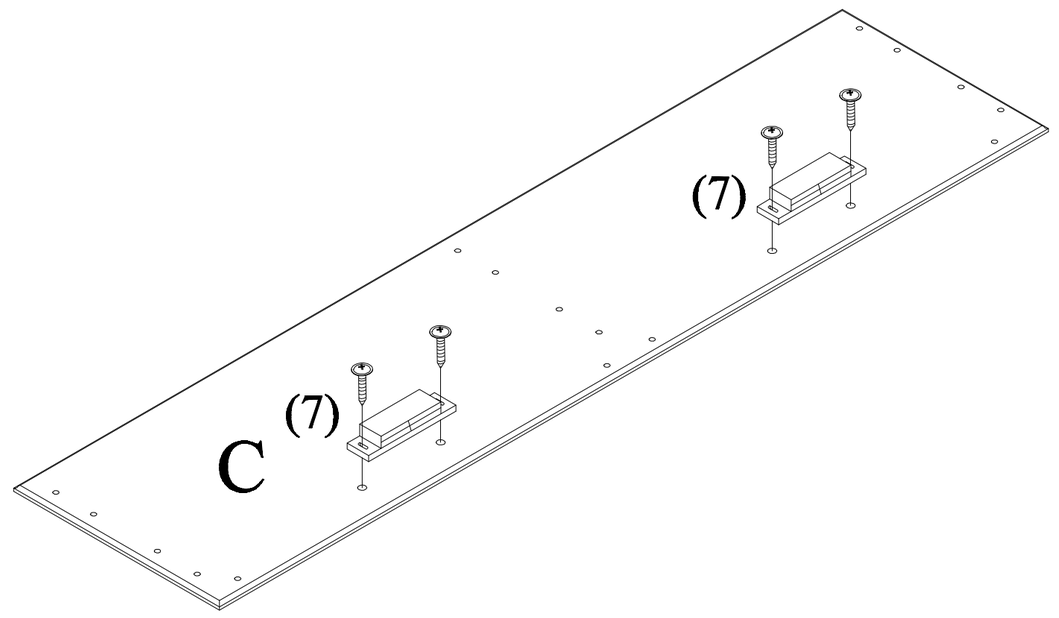

STEP 7: ASSEMBLE TOP PANEL (C) AND DOOR (A & B)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM BOLT & CAM LOCK (2) TO ASSEMBLE TOP PANEL (C) AND MIDDLE VERTICAL PANEL (H) & SIDE PANEL (F & G) TOGETHER, AND INSERT THE HINGE OF THE DOOR (A & B) INTO THE RELEVANT HOLES ON THE TOP PANEL (C) AND BOTTOM PANEL (D) AS SHOWN.
- USE THE VELVET HOLE COVER (2) TO COVER THE CAM-LOCK HOLES AS SHOWN.

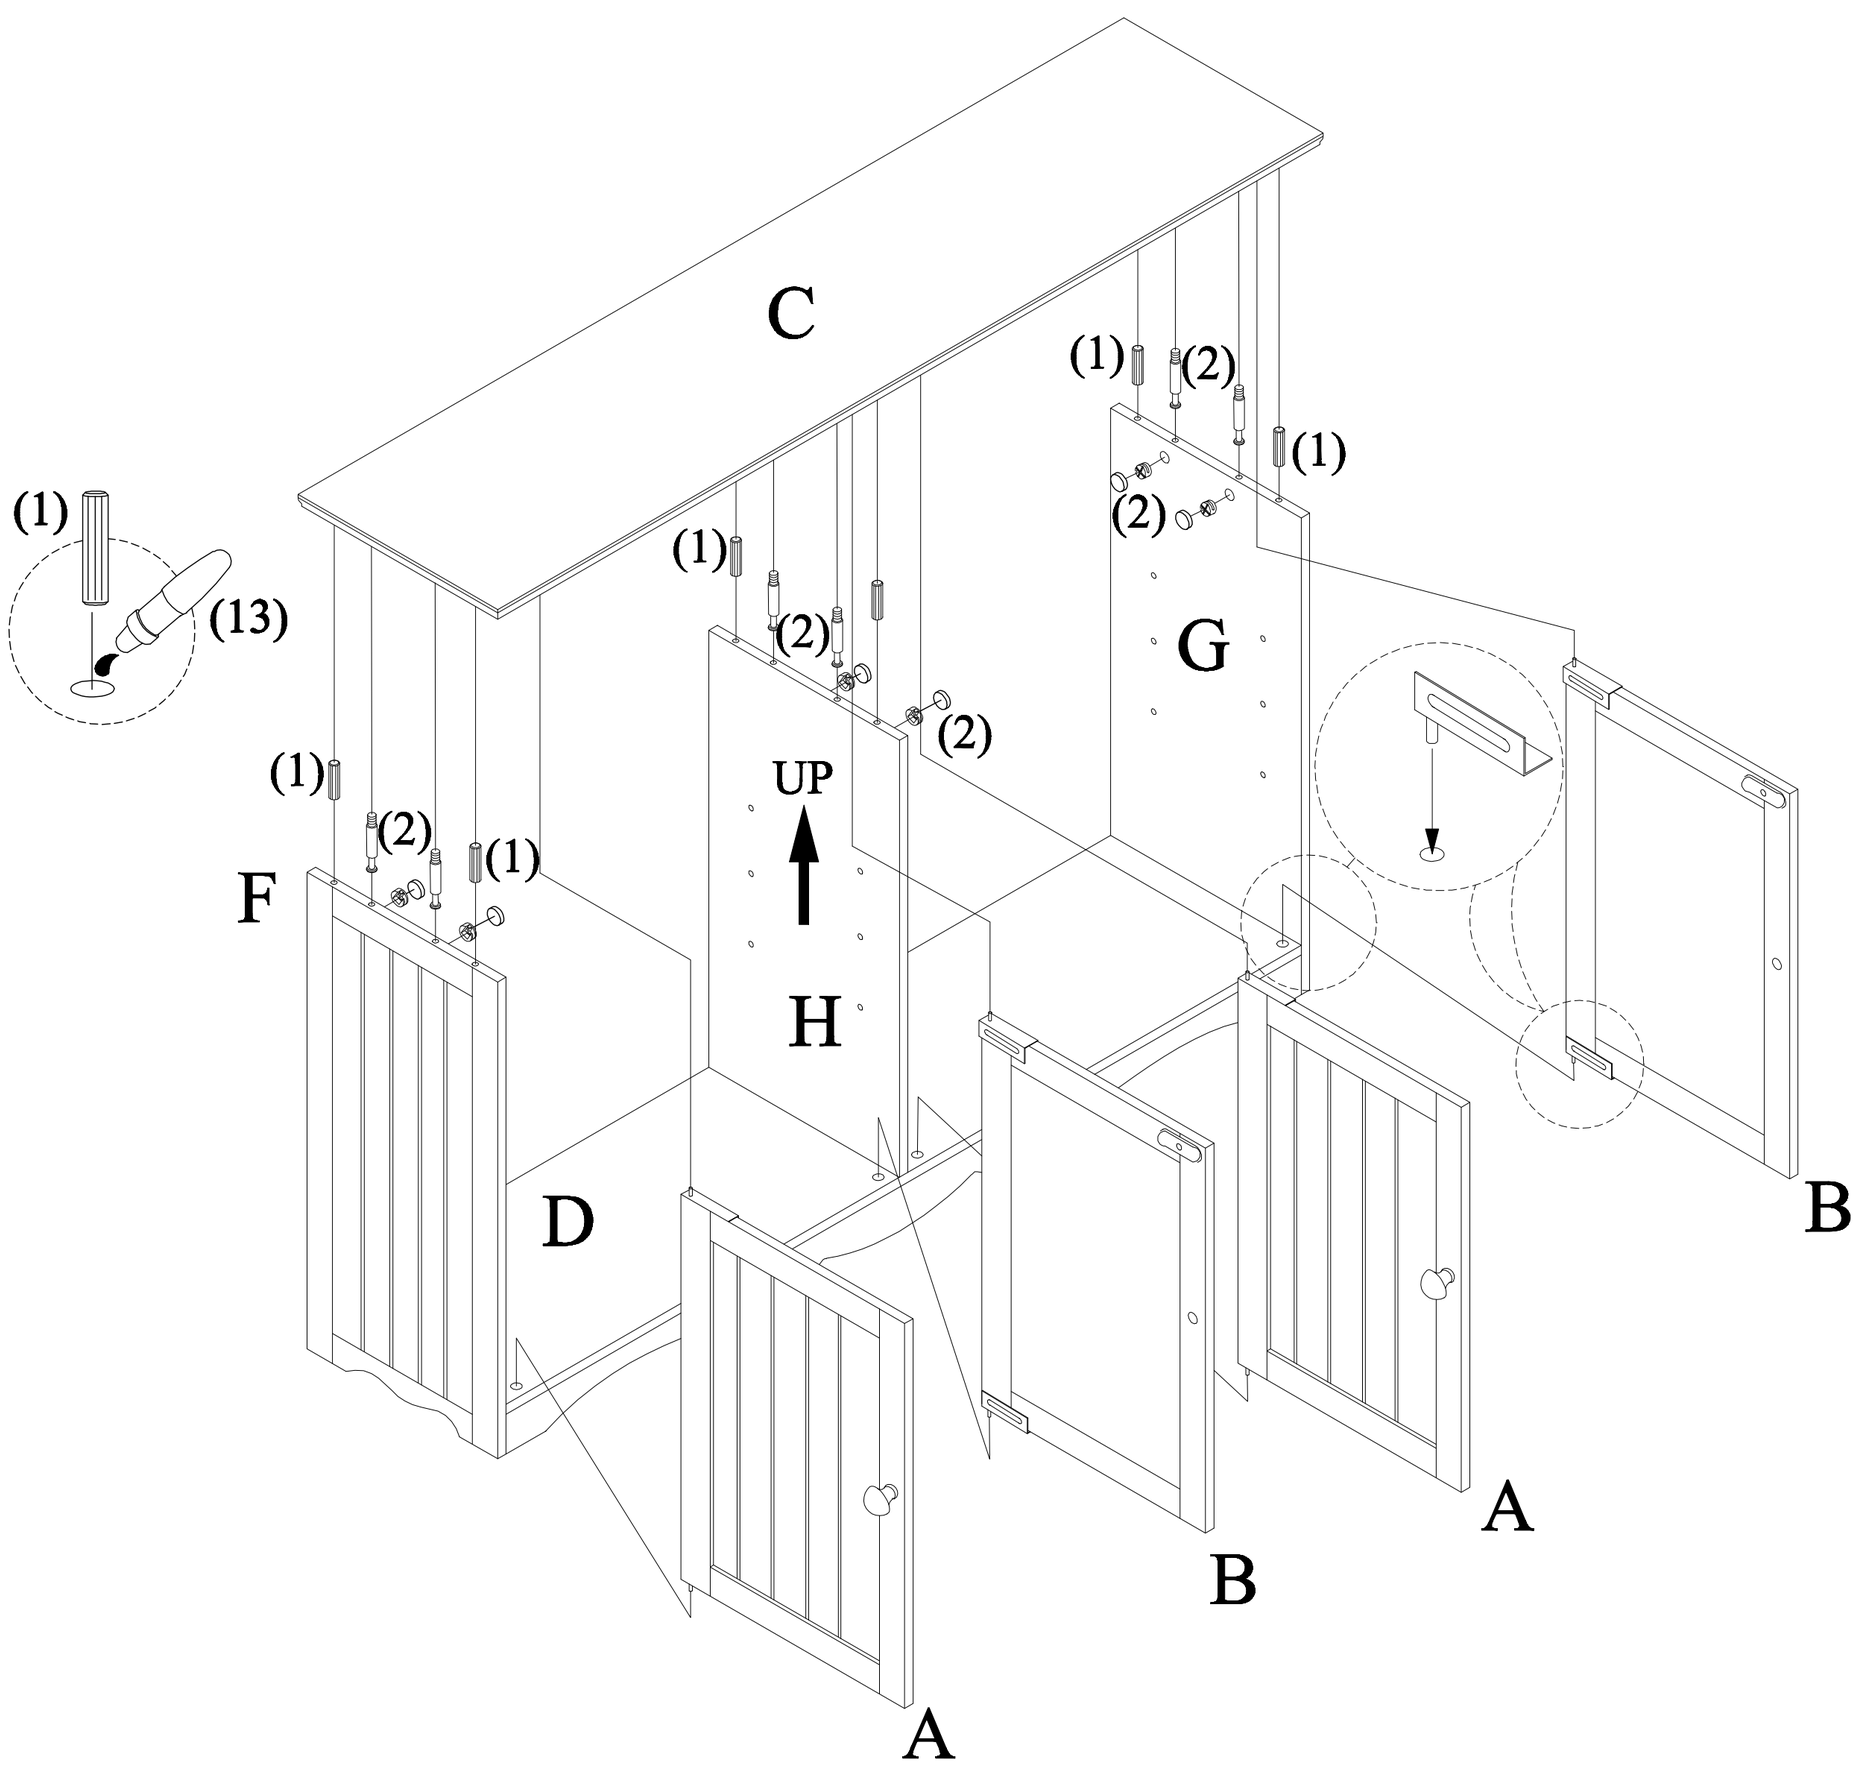

STEP 8: PLACE SHELF (I)

- INSERT SHELF HOLDERS (9) INTO THE HORIZONTAL HOLES INSIDE OF SIDE FRAME (F & G) AND MIDDLE VERTICAL PANEL (H), THEN PUT SHELF (I) ON THE SHELF HOLDERS.

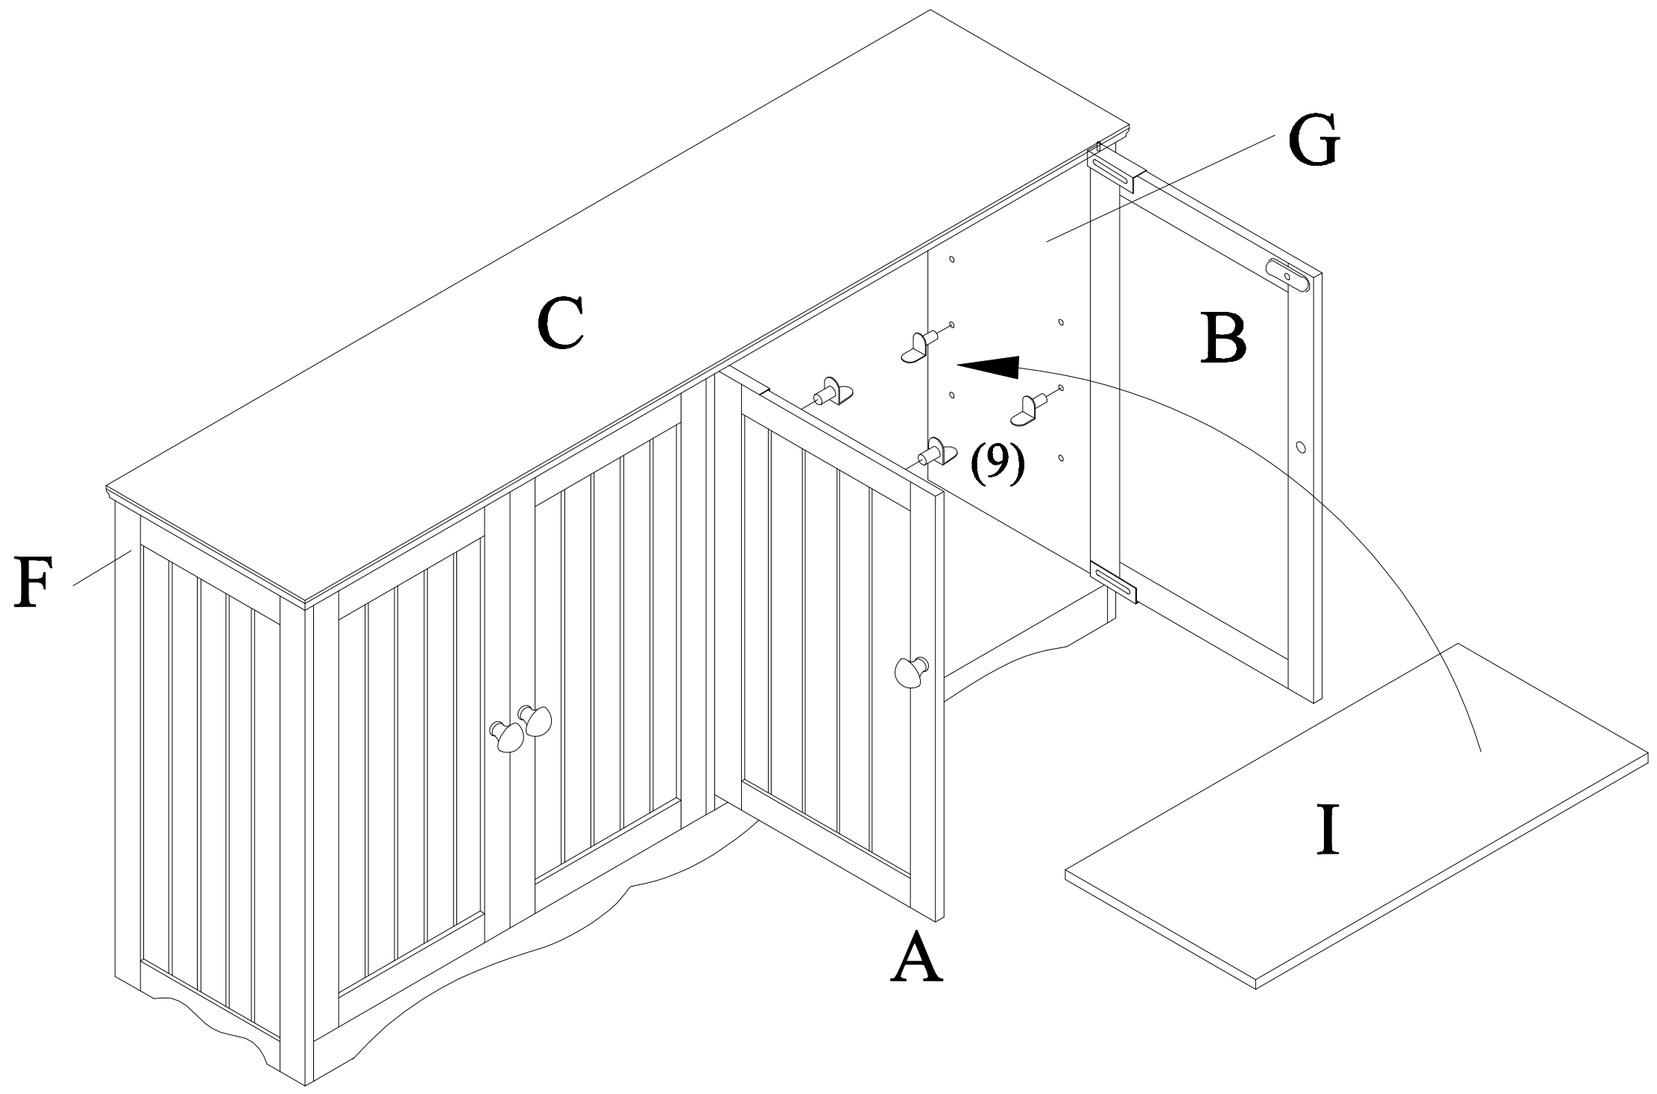

STEP 9: ASSEMBLE BACK PANEL (J)

- USE ROUND HEAD SCREW (10) TO ATTACH BACK PANEL (J) ON THE BACK OF PRE-ASSEMBLED UNIT.

NOTE:BEFORE YOU ASSEMBLE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS HAVE EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS EVENLY SPACED,THEN ATTACH BACK PANEL.

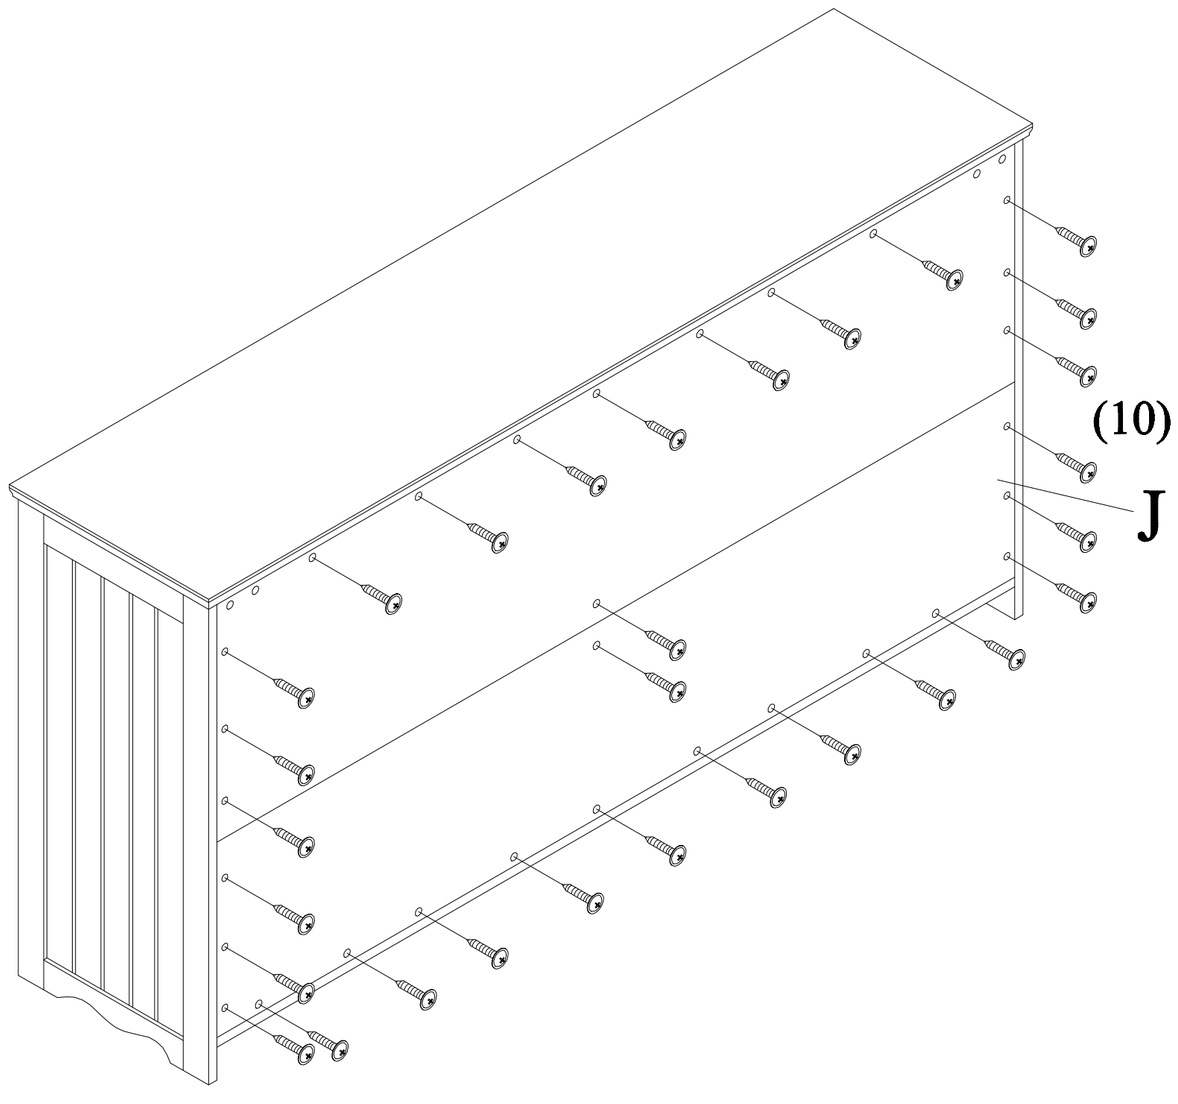

STEP 10: ASSEMBLE PREVENT DEVICE (11)

- USE ELECTRIC DRILL TO DRILL 4 SMALL HOLES ON THE DESIRED LOCATION OF WALL, INSERT 4 GECKOS INTO THE 4 HOLES BY RUBBER MALLET, USE TWO LONG SCREWS TO ATTACH ONE PLASTIC SLICE ONTO WALL, THEN USE TWO SHORT SCREWS TO ATTACH ANOTHER PLASTIC SLICE ON THE BACK OF PRE-ASSEMBLED PRODUCT.
- USE THE PLASTIC ROPE TO LINK THE PRODUCT AND WALL TOGETHER.